

LVT Alert Types & Definitions

Currently Received in Immix

Intrusion

Intrusion Detected - Person

An alert that is triggered when the camera analytic (Line Crossing or Detection Zone) classifies the intrusion as a person.

Intrusion Detected - Vehicle

An alert that is triggered when the camera analytic (Line Crossing or Detection Zone) classifies the intrusion as a vehicle.

Intrusion Detected - Object

An alert that is triggered when the camera analytic (Line Crossing or Detection Zone) is triggered and the Camera is unable to classify that intrusion.

New Alert Types in the Integration

Powerloss

Definition: An alert activates in the event of a sudden, unexplained loss of power.

Potential Triggers

- This alert type usually indicates vandalism has occurred.
- Can sometimes be triggered by brief drops in connectivity

Tamper

Tamper - Base Entry

Definition: An alert is sent by a trigger on the base unit when there is an attempt at unauthorized access to the trailer component of the unit.

Potential Triggers

- Individual breaking into the trailer portion of the unit

Tamper - Head Entry

Definition: When the head unit is opened, a push button activates, triggering an alert.

Potential Triggers

- Individual breaking in to the head unit portion of the unit

Mast Movement

Definition: An alert is activated by a sensor in the mast if it detects any upward or downward movement of the mast

Potential Triggers

- Someone using the mast winch to lower or raise the mast

Low Voltage Disconnect

Definition: If the LiveUnit's voltage falls below a certain level, power is cut off to the head unit and an alert is triggered.

Potential Triggers

- Solar Panels are being shaded or blocked causing insufficient charging
- Solar Panels are damaged
- Bad weather in the area leads to insufficient charging